
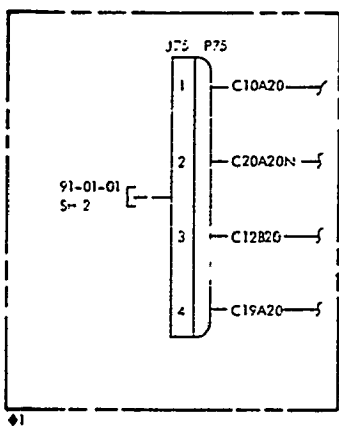


BEECHCRAFT  
BARON E55 AND BARON 58  
WIRING DIAGRAM MANUAL

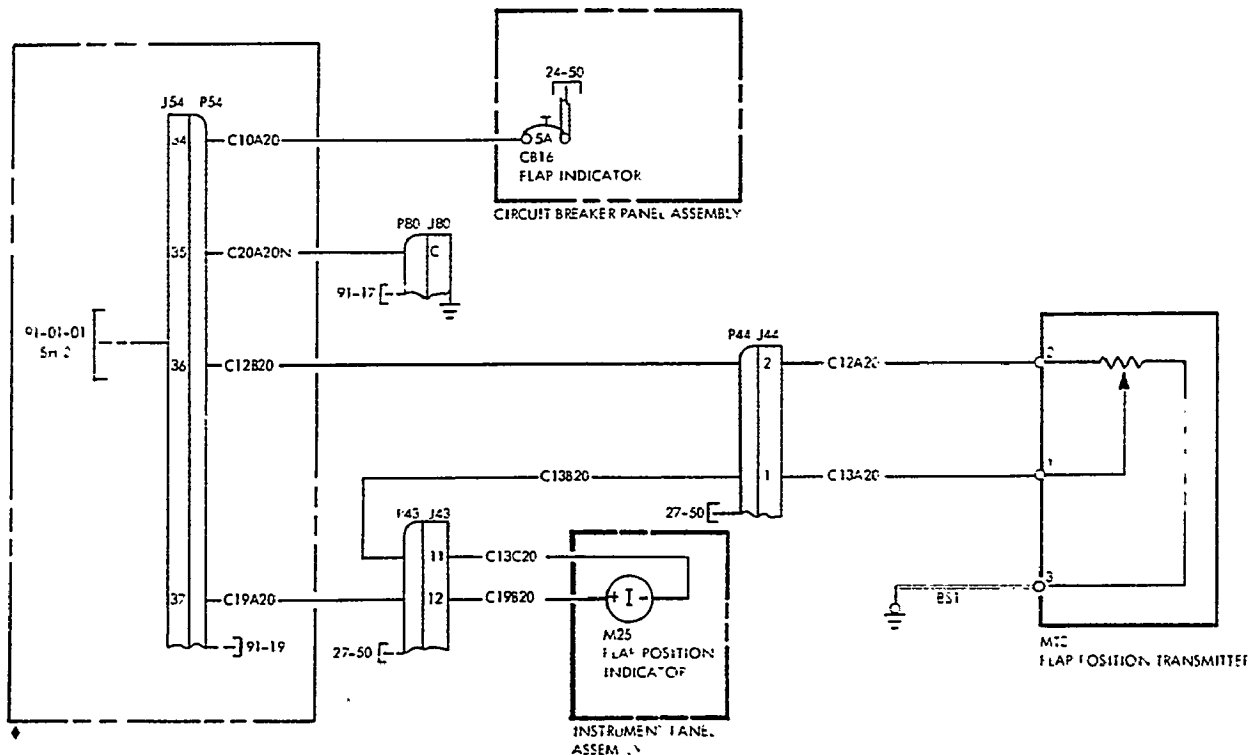

- ◆1 ON AIRCRAFT TE-1084 THRU TE-1143 AND TH-773 THRU TH-977.
- ◆ ON AIRCRAFT TE-1144 & AFTER AND TH-978 & AFTER.

**FLAPS-POSITION INDICATOR  
FOR SERIAL REFER TO PAGE 1**