


1. Bus Bar
2. Circuit Breaker
3. Air Valve Switch
4. Heater Blower Switch
5. Fuse
6. Resistor
7. Heater Ignitor
8. Overtemp Thermostat
9. Ductstat Heat Control
10. Heater Fuel Pump
11. Heater Fuel Solenoid Valve
12. Up Limit Switch
13. Heater Blower
14. Heater Blower Select Switch
15. Point Selector Switch
16. Air Entrance Duct Heater

* USE ONLY WHEN RADAR IS INSTALLED


Heater
TE-452 thru TE-767

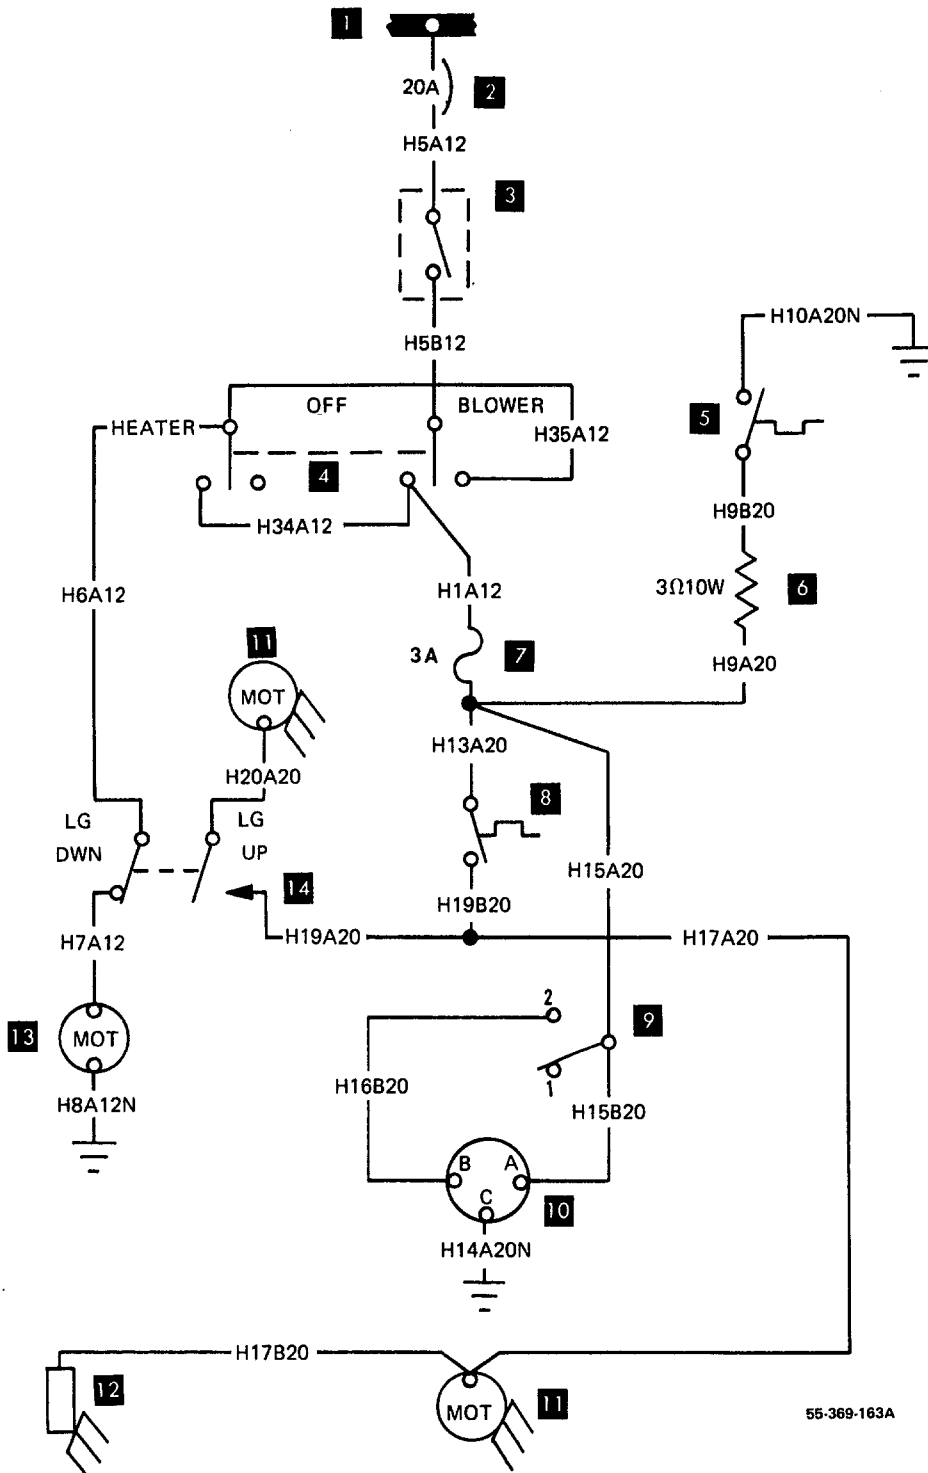

55-369-163A

- | | |
|------------------------|--------------------------|
| 1. Bus Bar | 8. Thermostat |
| 2. Circuit Breaker | 9. Heater Ignitor Switch |
| 3. Air Valve Switch | 10. Ignitor |
| 4. Heater Switch | 11. Fuel Pump |
| 5. Overtemp Thermostat | 12. Solenoid Valve |
| 6. Resistor | 13. Blower |
| 7. Fuse | 14. Switch |

Heater
TE-768 thru TE-967 except TE-959
TH-1 thru TH-436

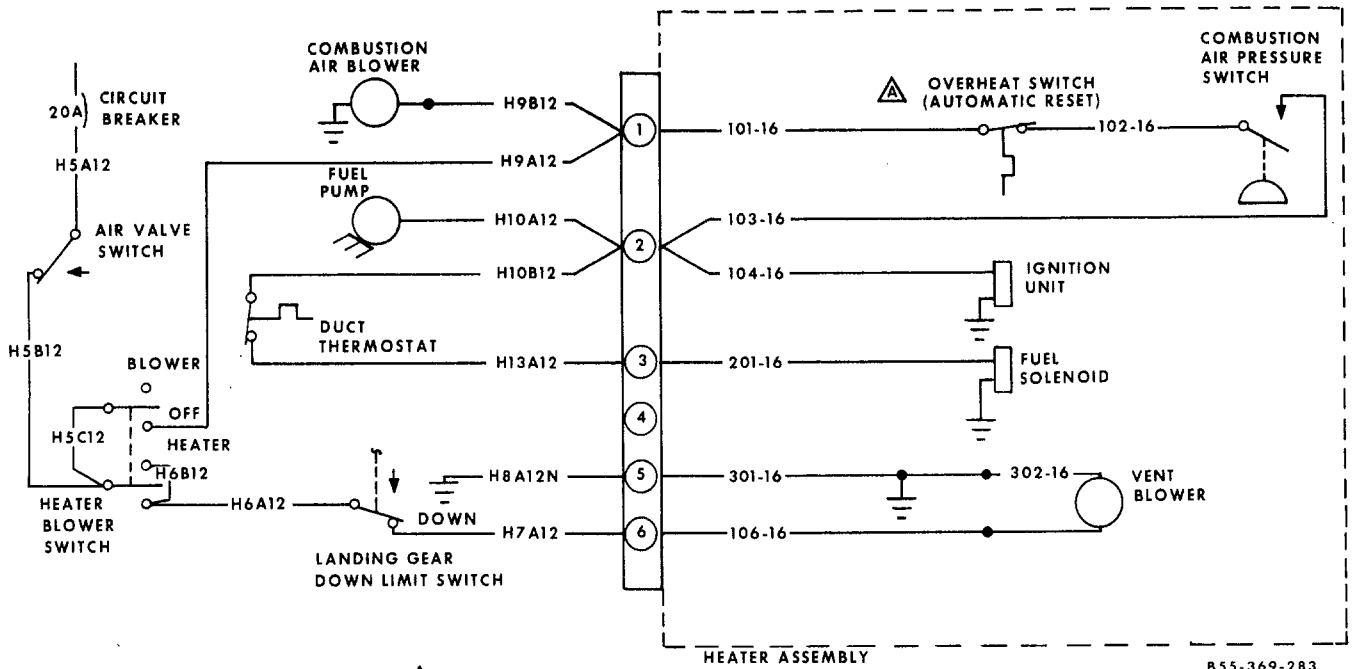

⚠ TC-1723
 TE-991
 TH-497
 AND AFTER IS MANUAL RESET

Heater
 TC-1658 thru TC-1935 except TC-1913
 TE-959, TE-968 thru TE-1063
 TH-437 thru TH-647 except TH-598