

Kevin O'Halloran's Instructions

1. Remove upholstery from the door which exposes the inside door handle mechanism (you can see it through the small triangular opening) - if you can't do this without screwing things up - STOP NOW.
2. To make the next step easier, unlatch the door, rotate handle to the closed and latched position while the door is open. This will make it easier to get the rod off. Use a screwdriver or needle nose pliers to pry the keeper arm forward and up so that you can slide the actuator rod off the shaft.
3. Turn the rod counterclockwise 1/2 turn. This makes it longer.
4. Push the keeper out of the way and reinstall the rod on the shaft.
5. Actuate the inside door handle to the locked position and see if the outside handle goes flush. If it does not - try another turn on the rod.
6. If someone has tried to force the door open and bent things up - it is a whole new set of problems. If it takes more than 3 full turns it is more than a simple adjustment.



