



Aircraft Heater Assembly D83A28 (S-50)

Illustrated Parts List

Index Number	Part Number	Description	Units Per Assembly
	D83A28	HEATER ASSEMBLY	1
1	MS20913-2S	PLUG, Drain	2
2	54A35	PLUG, Spark	1
3	51A05	ELECTRODE, Ground	1
4	56A14	WASHER, Ground Electrode	1
5	07C56	NOZZLE Holder and Feed Assembly	1
6	51A66	GASKET, Nozzle Holder	1
7	V40A76	SCREW, Fillister Head	2
8	AN935-10	WASHER, Spring Lock	4
9	AN501A10-8	SCREW, Fillister Head	4
10	87A37	GASKET, Fuel Fitting	2
11	AN821-6	ELBOW, Flared Tube	1
12	G36A47	NOZZLE, Spray (Marked 2.00)	1
*NS	39A19	STRAINER, Fuel	1
13	51A45	HEAD, Combustion	1
14	52A02	GASKET, Copper Asbestos	1
15	AN500A8-8	SCREW, Fillister Head	9
16	45A28	WASHER, Copper	9
17	C85A82	JACKET	1
18	AN500A8-10	SCREW, Fillister Head	3
19	MS21044N08	NUT, Self Locking	3
20	ED99A30	PLATE, Rating	**NP
21	68D72-6	RIVET	2
22	A35A71	GASKET, Rope	1
23	45C40	COMBUSTION CHAMBER AND RADIATOR ASSEMBLY	1

* NS = Not Shown

** NP = Not Procurable

See next page for exploded view.

