

5-24

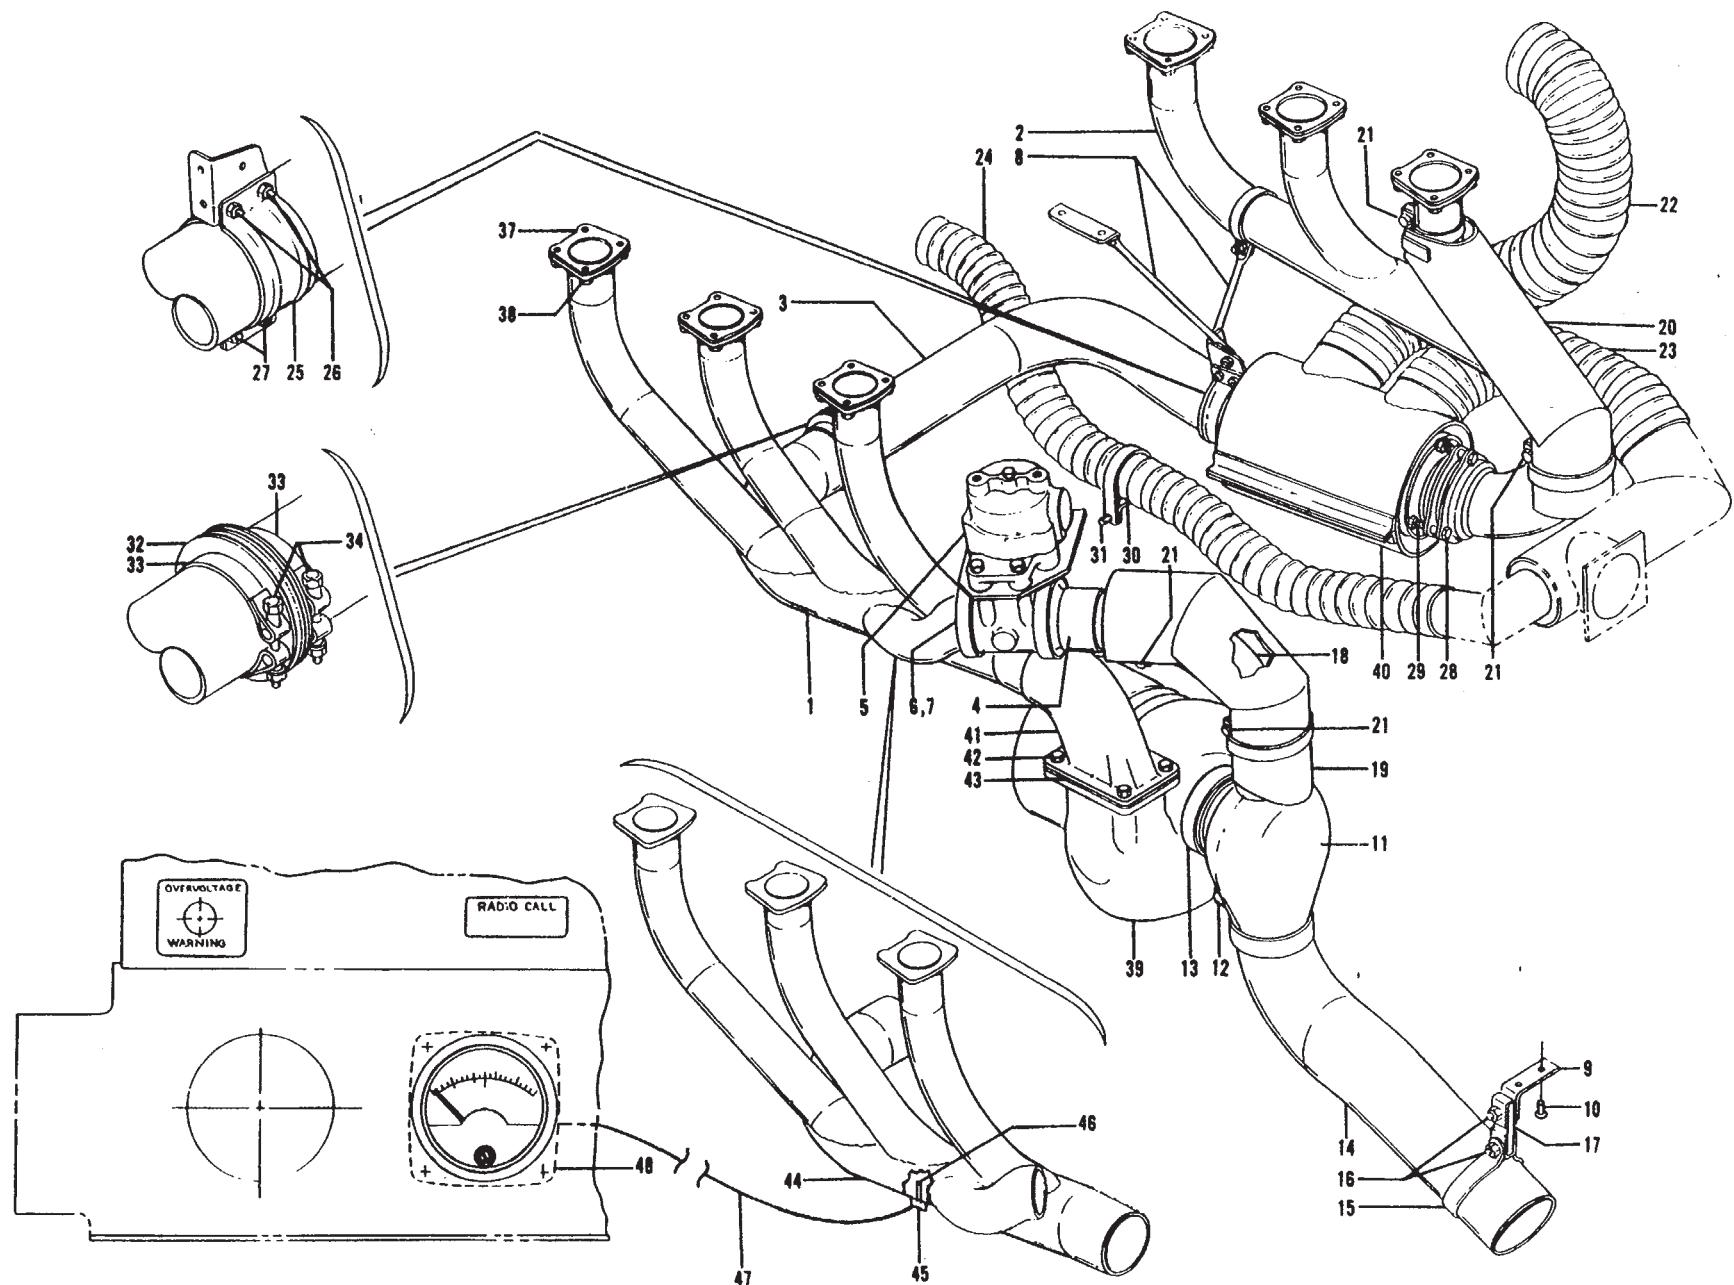


Figure 101. Turbocharged Exhaust System and Alcor Mixture Control

C3

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS	USABLE
				PER ASSY	ON CODE
101 -	286S35-073		EXHAUST SYSTEM INSTL,TURBOCHARGER	NP	
	35-910028-601		POWER PLANT ASSY,CANTED TURBOCHARGED	1	
- 1	286S35-074-13		HEADER ASSY,EXHAUST LH /WITHOUT ALCOR BOSS/	1	
- 2	286S35-074-3		HEADER ASSY,EXHAUST RH.	1	
- 3	286S35-074-7		PIPE ASSY,EXHAUST CROSS	1	
- 4	286S35-074-21		FLANGE ASSY,WASTE GATE.	1	
- 5	470818-2		VALVE ASSY,EXHAUST BYPASS	1	
- 6	18276-225		COUPLING,EXHAUST.	2	
- 7	24096N225		GASKET,EXHAUST COUPLING	2	
- 8	286S35-074-9		BRACKET ASSY,HEATER SUPPORT	1	
	35-400473-602		MATING,FUSELAGE	NP	
- 9	286S35-074-93		BRACKET,EXHAUST SUPPORT /ATTACHING PARTS/	1	
- 10	NAS220-8		SCREW	2	
	AN960-8		WASHER.	2	
	MS21045-08		NUT	2	
- 11	286S35-074-17		PLENUM ASSY,TURBOCHARGER OUTLET /ATTACHING PARTS/	1	
- 12	AN3-5A/M/ AN960-10 MS21045-3		BOLT.	1	
			WASHER.	1	
			NUT	1	
- 13	U4211-375M		CLAMP,TURBOCHARGER OUTLET PLENUM.	1	
- 14	286S35-074-19		TAILPIPE ASSY,EXHAUST	1	
- 15	286S35-074-135		CLAMP,TAILPIPE. /ATTACHING PARTS/	1	
- 16	AN3-5A/M/ AN960-10L MS21045-3		BOLT.	2	
			WASHER.	2	
			NUT	2	
- 17	286S35-074-131		LINK ASSY,TAILPIPE.	1	
- 18	286S35-074-137		ELBOW ASSY,EXHAUST WASTE GATE	1	
- 19	286S35-091-21		SHIELD ASSY,EXHAUST HEAT LH	1	
- 20	286S35-091-3		SHIELD ASSY,EXHAUST HEAT RH /ATTACHING PARTS/	1	
- 21	AN3-4A/M/ AN960-10 MS21045-3		BOLT.	2	
			WASHER.	2	
			NUT	2	
- 22	115167DXX121283		DUCT,COLD AIR TO HEATER	1	1
	115167DXX121443		DUCT,COLD AIR TO HEATER	1	2
- 23	115167DXX120623		DUCT,HEATER TO MIXER VALVE.	1	1
	35-550115-99		DUCT,HEATER TO MIXER VALVE.	1	2
- 24	115167DXX081683		DUCT,COLD AIR TO MIXER VALVE.	1	1
	115167DXX081483		DUCT,COLD AIR TO MIXER VALVE.	1	2
- 25	35-950004-17		CLAMP ASSY,HEATER FWD /ATTACHING PARTS/	2	
- 26	AN4-7A/M/		BOLT.	2	
- 27	AN4-6A/M/ AN960-416 MS21045-4		BOLT.	2	
			WASHER.	8	
			NUT	4	
- 28	AN3-14/M/		BOLT,HEATER	3	
- 29	186-218 AN960-10 AN310-3 MS24665-134 MS21919DG32		SPRING,HEATER	3	
			WASHER,HEATER	9	
			NUT,HEATER.	3	
			PIN,HEATER COTTER	3	
- 30			CLAMP,CABIN FRESH AIR DUCT. /ATTACHING PARTS/	1	
- 31	AN3-4A/M/ AN960-10 MS21045-3		BOLT.	1	
			WASHER.	1	
			NUT	1	
- 32	CEL230784		SEAL,EXHAUST CROSS PIPE BELLows	1	

FIG. & INDEX NO.	PART NO.	1 2 3 4 5 6 7	DESCRIPTION	UNITS PER ASSY	USABLE ON CODE
101 - 33	286S35-074-109		. CLAMP,BELLOWS SEAL. /ATTACHING PARTS/		2
- 34	AN3C15A/M/ AN960C10 MS21046C3		. BOLT. WASHER. NUT		1 1 1
35			. DELETED		
- 36			. DELETED		
	35-910028		ENGINE INSTL,TURBOCHARGED		NP
- 37	628260		. GASKET,EXHAUST FLANGE		6
- 38	536038		. NUT,EXHAUST STACK ATTACHING		24
- 39	406610-1		. TURBOCHARGER ASSY /TE06-59/		1
- 40	8057-29		. HEATER /SUPERSEDES 8057-19/		1
	286S35-071		MOUNT INSTL,TURBOCHARGER		NP
- 41	286S35-074-15		. PLenum ASSY,TURBOCHARGER INLET /ATTACHING PARTS/		1
- 42	AN6C12A/M/ AN960C616 AN363C624		. BOLT. WASHER. NUT		4 8 4
- 43	286STD070 35-329007		. GASKET,TURBOCHARGER INLET PLENUM.		1
- 44	35-329007-1		INDICATOR INSTL,ALCOR MIXTURE CONTROL		NP
- 45	106B		. STACK ASSY,EXHAUST LH /WITH ALCOR BOSS/.		1
- 46	MODEL 106B		. . BOSS,EXHAUST GAS TEMPERATURE INDICATOR		1
- 47	MCI104		. PROBE,EXHAUST GAS TEMPERATURE INDICATOR		1
- 48	BT145		. WIRE,LEAD		1
			. INDICATOR,EXHAUST GAS TEMPERATURE /SUPERSEDES 145/		1

CODE EFFECTIVITY

CODE EFFECTIVITY

1 D-8036 THRU D-8871 2 D-8872 AND AFTER