


B E E C H C R A F T  
BARON SERIALS TC-1 THRU TC-1607, TE-1 THRU TE-937, TE-939 THRU TE-942  
I L L U S T R A T E D P A R T S C A T A L O G

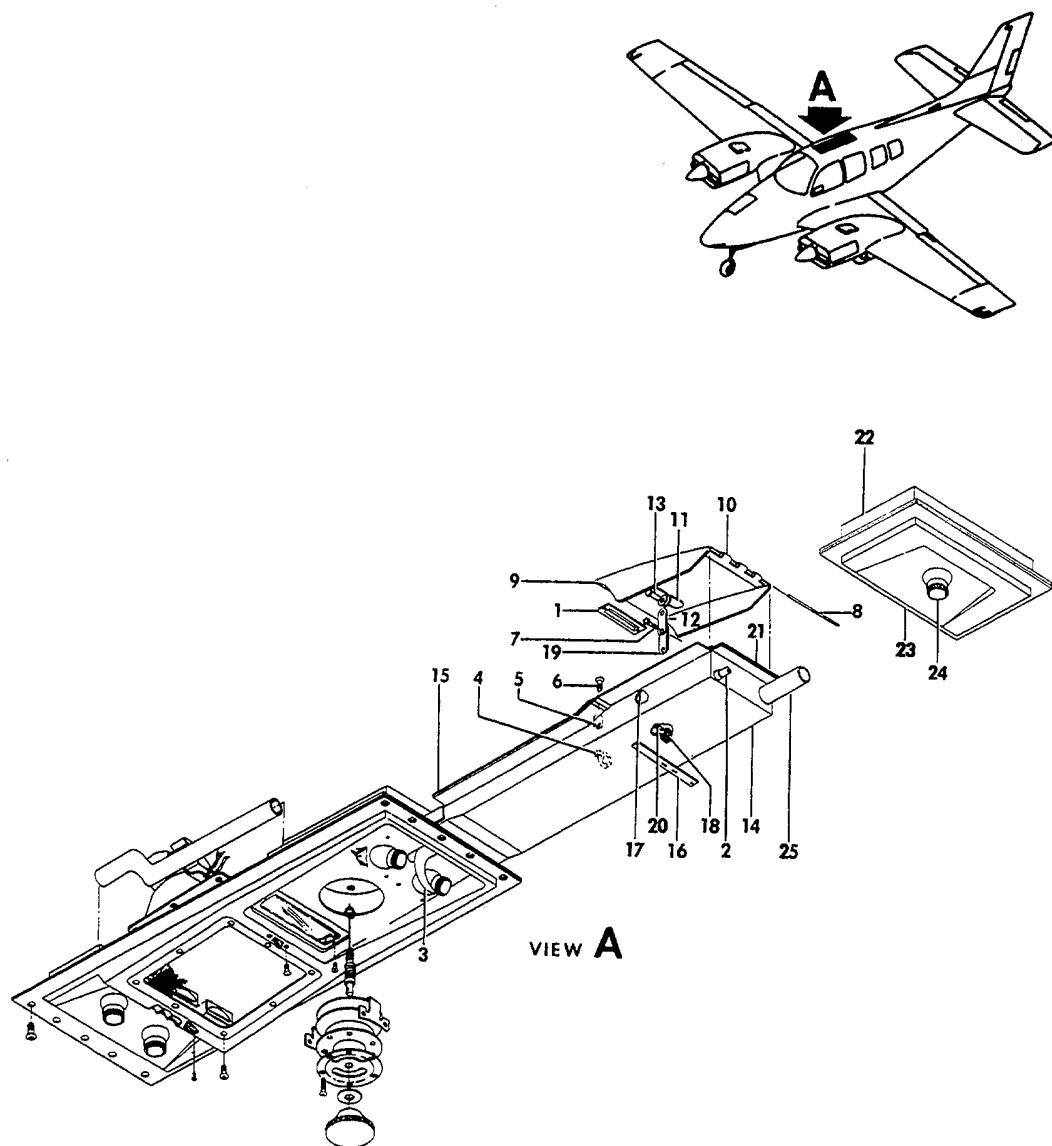

55-147-14

BEECHCRAFT  
BARON SERIALS TC-1 THRU TC-1607, TE-1 THRU TE-937, TE-939 THRU TE-942  
ILLUSTRATED PARTS CATALOG

ATA CODE & INDEX NO.	PART NO.	DESCRIPTION	UNITS PER ASSY							USABLE ON CODE	
			1	2	3	4	5	6	7		
22-01	35-550562-35	DUCT INSTL,FRESH AIR/STD 4 AIR VALVES/-	.	.	.	.	.	.	.	NP	1
	35-550562-33	DUCT INSTL,FRESH AIR/OPT 5 AIR VALVES/-	.	.	.	.	.	.	.	NP	1
- 1	35-550562-97	• STRIP,STALL . . . . .	.	.	.	.	.	.	.	1	1
- 2	35-550562-21	• TUBE,DRAIN. . . . .	.	.	.	.	.	.	.	1	1
- 3	95-380007	• CONTROL ASSY,PUSH PULL . . . . .	.	.	.	.	.	.	.	1	1
		/ATTACHING PARTS/									
- 4	AN742-4	• CLAMP . . . . .	.	.	.	.	.	.	.	1	
- 5	1006960-ZV014	• SPACER . . . . .	.	.	.	.	.	.	.	1	
- 6	AN515-10R	• SCREW . . . . .	.	.	.	.	.	.	.	1	
	AN960-10	• WASHER . . . . .	.	.	.	.	.	.	.	1	
	MK1000-1032	• NUTPLATE . . . . .	.	.	.	.	.	.	.	1	
- 7	35-550532-85	• BOLT . . . . .	.	.	.	.	.	.	.	1	
	AN960-10	• WASHER . . . . .	.	.	.	.	.	.	.	2	
	AN393	• NUT . . . . .	.	.	.	.	.	.	.	1	
		/ATTACHING PARTS/									
	35-550562-601	• SCOOP ASSY,FRESH AIR. . . . .	.	.	.	.	.	.	.	1	2
	35-550562-607	• SCOOP ASSY,FRESH AIR. . . . .	.	.	.	.	.	.	.	1	3
		/ATTACHING PARTS/									
- 8	AN253-2-375	• PIN,HINGE . . . . .	.	.	.	.	.	.	.	1	1
		/ATTACHING PARTS/									
- 9	35-550562-51	• • SCOOP . . . . .	.	.	.	.	.	.	.	1	1
- 10	35-550562-91	• • HINGE/SUPERSEDES 35-550562-42/. . . . .	.	.	.	.	.	.	.	1	1
- 11	AN743-13	• • BRACKET . . . . .	.	.	.	.	.	.	.	2	1
	35-550562-45	• • ARM,AIR SCOOP . . . . .	.	.	.	.	.	.	.	1	1
- 12	35-550562-87	• • LINK,AIR SCOOP. . . . .	.	.	.	.	.	.	.	1	2
		/ATTACHING PARTS/									
- 13	AN393	• PIN . . . . .	.	.	.	.	.	.	.	1	
	AN960-10	• WASHER . . . . .	.	.	.	.	.	.	.	1	
	AN380-2-2	• PIN,COTTER. . . . .	.	.	.	.	.	.	.	1	
		/ATTACHING PARTS/									
	35-550562-603	• DUCT ASSY,FRESH AIR/OPT 5 AIR VALVES/ . . . . .	.	.	.	.	.	.	.	1	2
	35-550562-609	• DUCT ASSY,FRESH AIR/OPT 5 AIR VALVES/ . . . . .	.	.	.	.	.	.	.	1	3
	35-550562-65	• DUCT ASSY,FRESH AIR/STD 4 AIR VALVES/ . . . . .	.	.	.	.	.	.	.	1	1
	35-550562-37	• • PAN/USED WITH STD 4 AIR VALVES/ . . . . .	.	.	.	.	.	.	.	1	1
- 14	35-550562-39	• • PAN/USED WITH OPT 5 AIR VALVES/ . . . . .	.	.	.	.	.	.	.	1	1
- 15	35-550562-61	• • COVER . . . . .	.	.	.	.	.	.	.	1	1
- 16	35-550562-43	• • PLATE . . . . .	.	.	.	.	.	.	.	1	1
- 17	35-550562-67	• • PAD . . . . .	.	.	.	.	.	.	.	2	1
- 18	AN743-13	• • BRACKET . . . . .	.	.	.	.	.	.	.	2	1
- 19	35-550562-87	• • LINK. . . . .	.	.	.	.	.	.	.	1	1
		/ATTACHING PARTS/									
- 20	AN393	• PIN . . . . .	.	.	.	.	.	.	.	1	
	AN380-2-2	• PIN,COTTER. . . . .	.	.	.	.	.	.	.	1	
		/ATTACHING PARTS/									
- 21	35-550562-41	• HINGE,HALF. . . . .	.	.	.	.	.	.	.	1	1
	95-554036-71	• DUCT ASSY,FRESH AIR/OPT 5TH AIR VALVE/ . . . . .	.	.	.	.	.	.	.	1	4
	95-554036-75	• DUCT ASSY,FRESH AIR/OPT 5TH AIR VALVE/ . . . . .	.	.	.	.	.	.	.	1	5
	95-554036-67	• • COVER/OPT 5TH AIR VALVE/. . . . .	.	.	.	.	.	.	.	1	4
- 22	95-554036-77	• • COVER/OPT 5TH AIR VALVE . . . . .	.	.	.	.	.	.	.	1	5
- 23	95-554036-69	• • PAN/OPT 5TH AIR VALVE/. . . . .	.	.	.	.	.	.	.	1	1
- 24	B2120-501	• • VALVE,FRESH AIR/OPT 5TH AIR VALVE/. . . . .	.	.	.	.	.	.	.	1	1
		/ATTACHING PARTS/									
	NAS384-8-6	• • SCREW . . . . .	.	.	.	.	.	.	.	4	
	A1778-8Z1	• • NUT . . . . .	.	.	.	.	.	.	.	4	
		/ATTACHING PARTS/									
- 25	35-550562-59	• TUBE,FRESH AIR/OPT 5TH AIR VALVE/ . . . . .	.	.	.	.	.	.	.	1	1